

EN

UNIVERSAL SNOW BLADE MOUNTING PAD
INSTALLATION MANUAL


DE

MONTAGEANLEITUNG FÜR
UNIVERSAL-SCHNEESCHILD-MONTAGEPADS




For: CFMoto ZForce 800 (2013-2022)


2444.0084.1

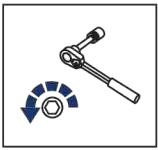


EN Regular fasteners
DE Originale montageile

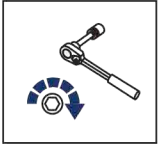


EN Regular fasteners
DE Originale montageile

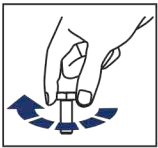


EN Screw a several turns
DE Für wenigen Umdrehungen befestigen

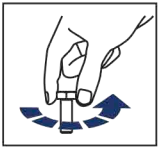

EN Loosen bolts
DE Bolzen lockern

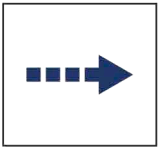




EN Movement Arrow
DE Bewegungsrichtung

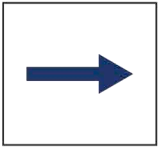


EN Location/Position Arrow
DE Anordnung/Positionsrichtung









EN Screw Arrow
DE Drehungsrichtung

	EN Ratchet DE Ratsche		S - 13		S - 17
---	--------------------------	---	--------	--	--------

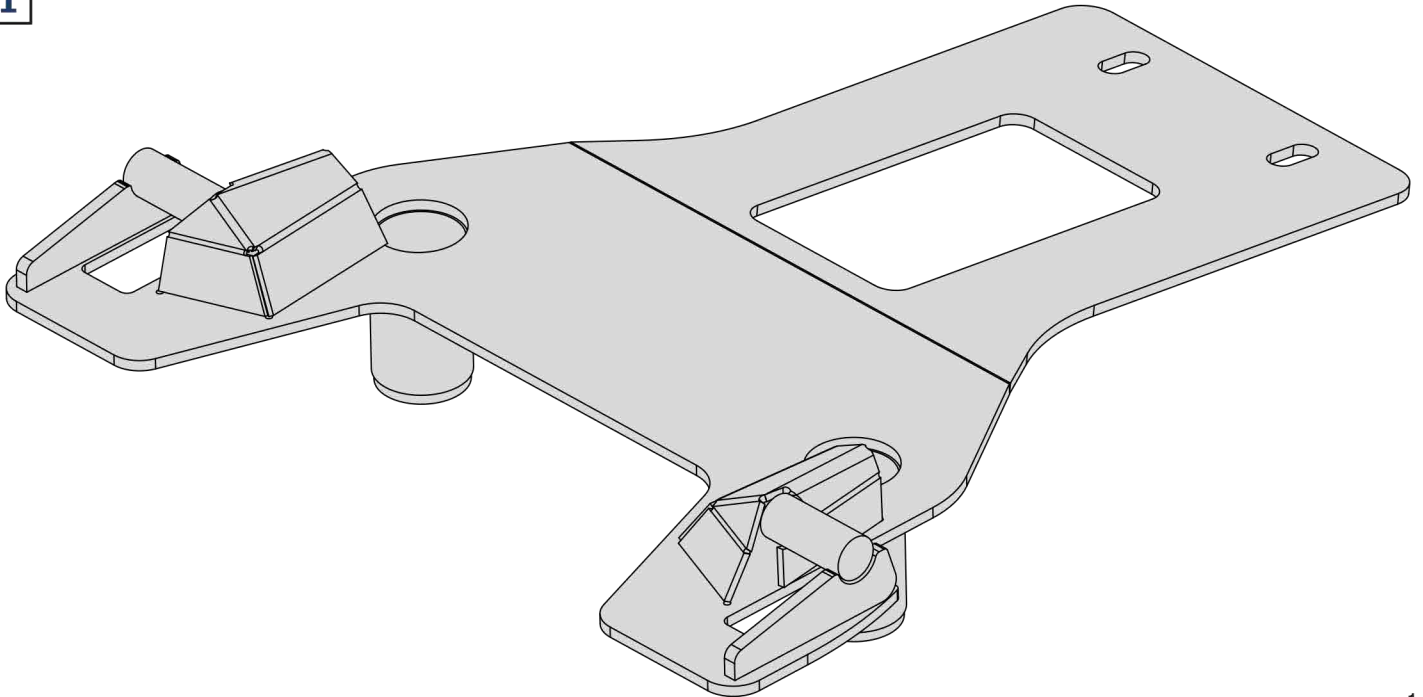1



x1

2		3		4		5		6		7	
	x1	M10x105/35	x2	M8x35	x2	M10x35	x2	ø8	x2	ø10	x2

