

EN	SKID PLATE INSTALLATION MANUAL
FR	MANUEL D'INSTALLATION DE PLAQUE DE PROTECTION
DE	MONTAGEEINLEITUNG FÜR UNTERBODENSCHUTZSYSTEM
RU	ИНСТРУКЦИЯ ПО УСТАНОВКЕ КОМПЛЕКТА ЗАЩИТ




For: CF MOTO 500 H.O. (2015-)


2444.6846.1

444.6846.1




































EN Ratchet
FR Clé À Cliquet
DE Ratsche
RU Трещетка







S - 10;
S - 13

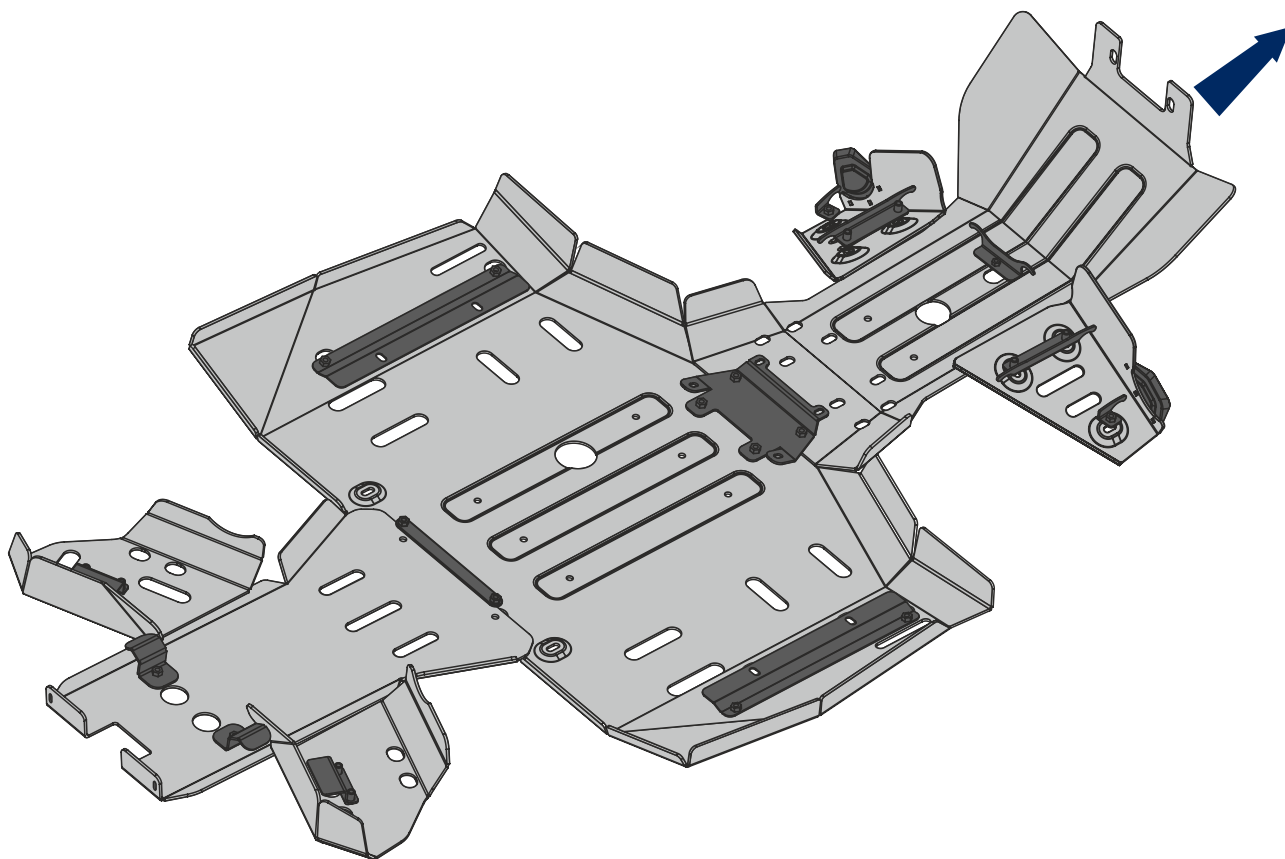


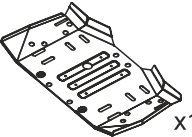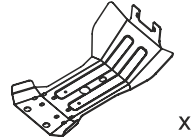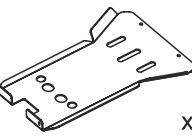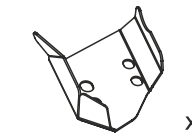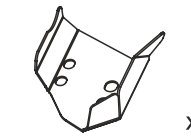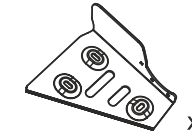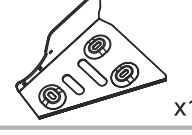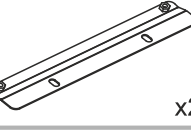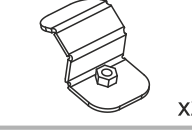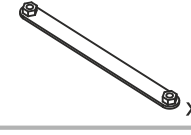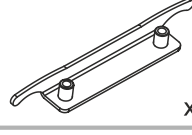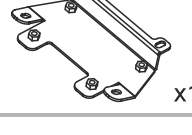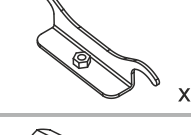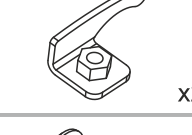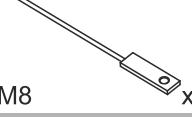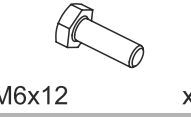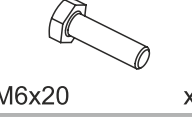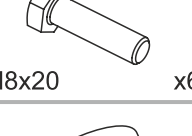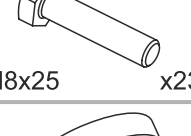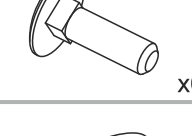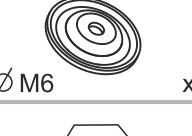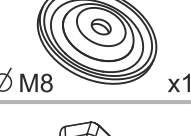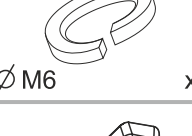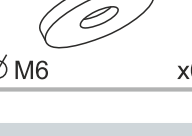
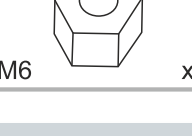
 x1	 x1	 x1	 x1	 x1	 x1
 x1	 x2	 x2	 x2	 x1	 x2
 x1	 x1	 x2	 M8 x4	 M6x12 x4	 M6x20 x6
 M8x20 x6	 M8x25 x23	 x6	 Ø M6 x4	 Ø M8 x17	 Ø M6 x6
 Ø M6 x6	 Ø M8 x12	 Ø M6 x6	 M6 x6	 x1	 x1

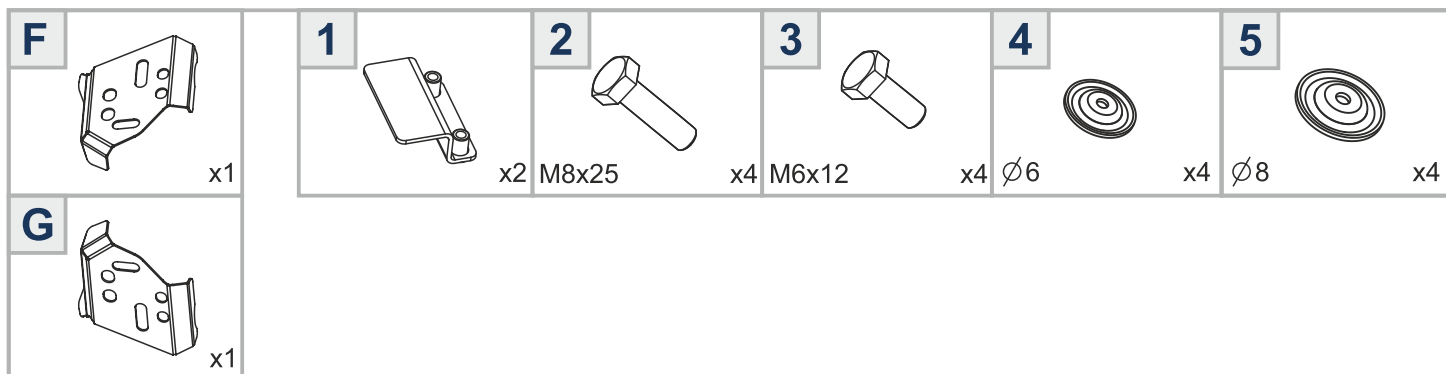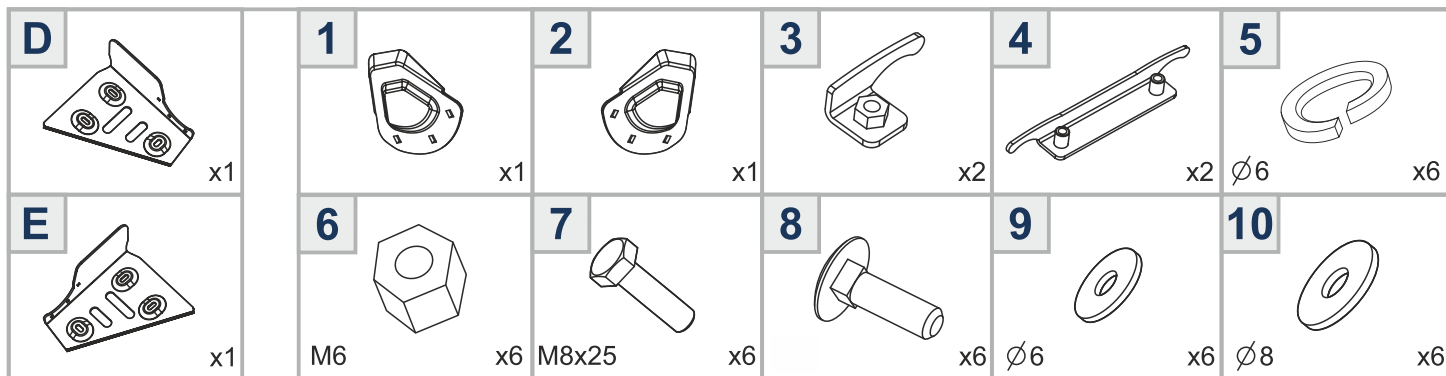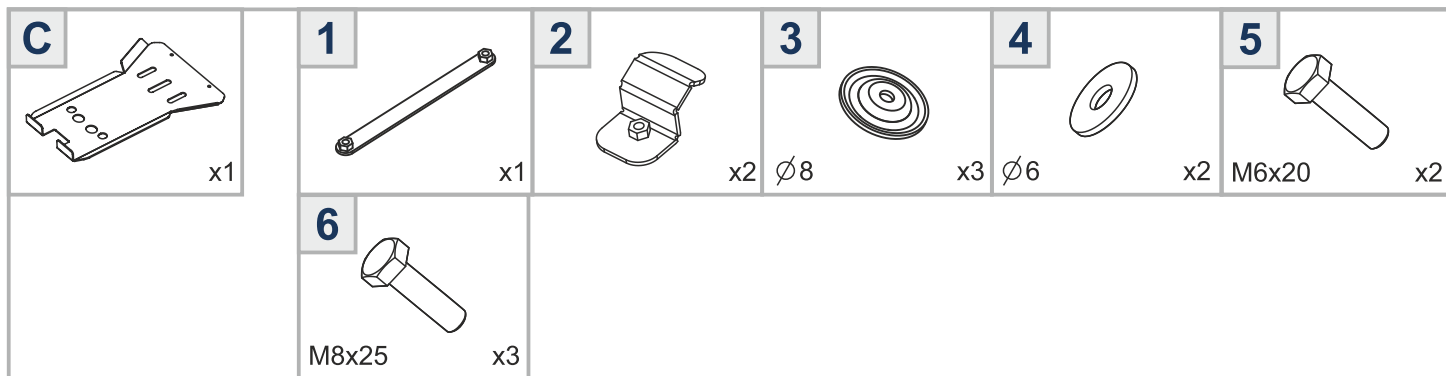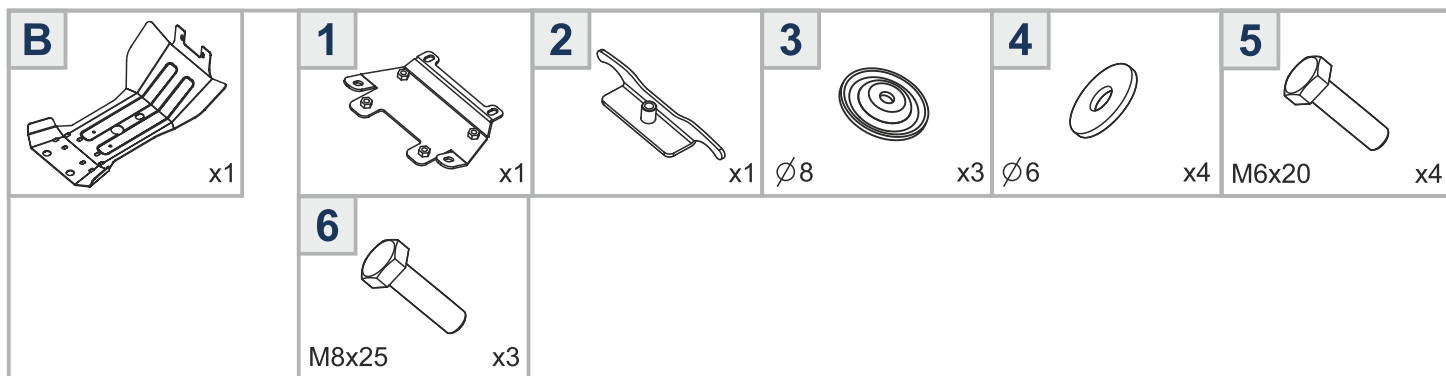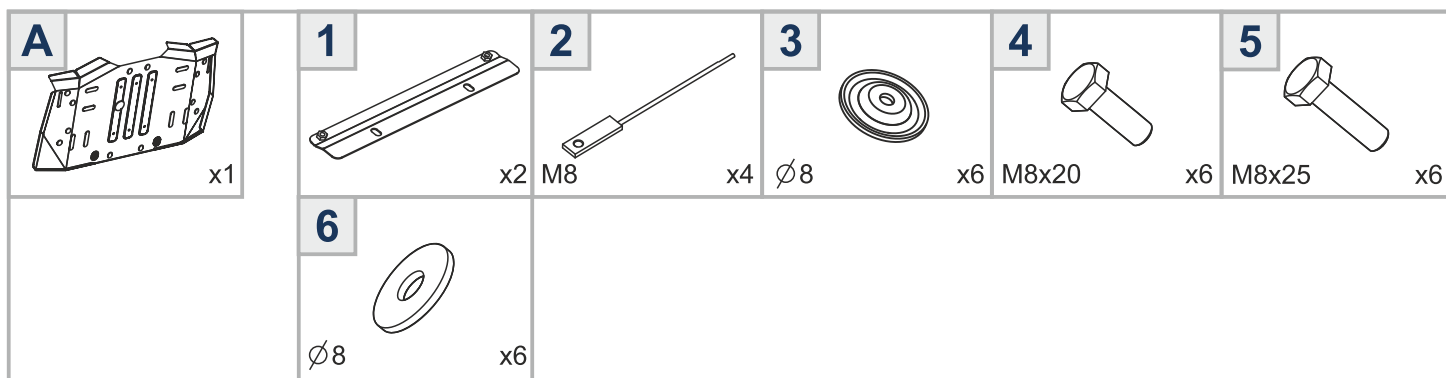


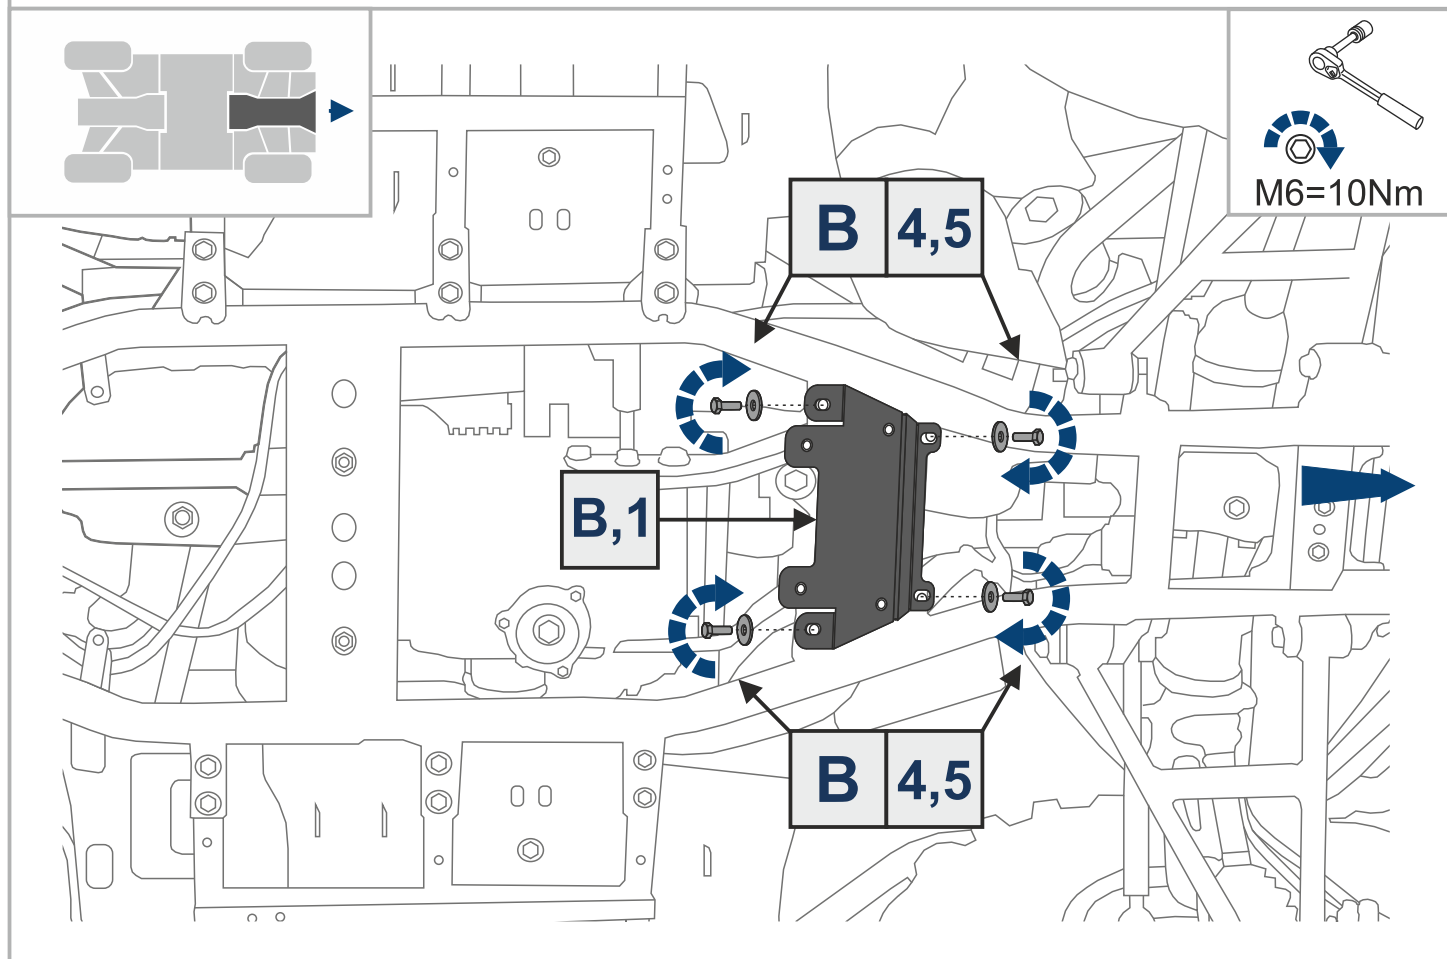
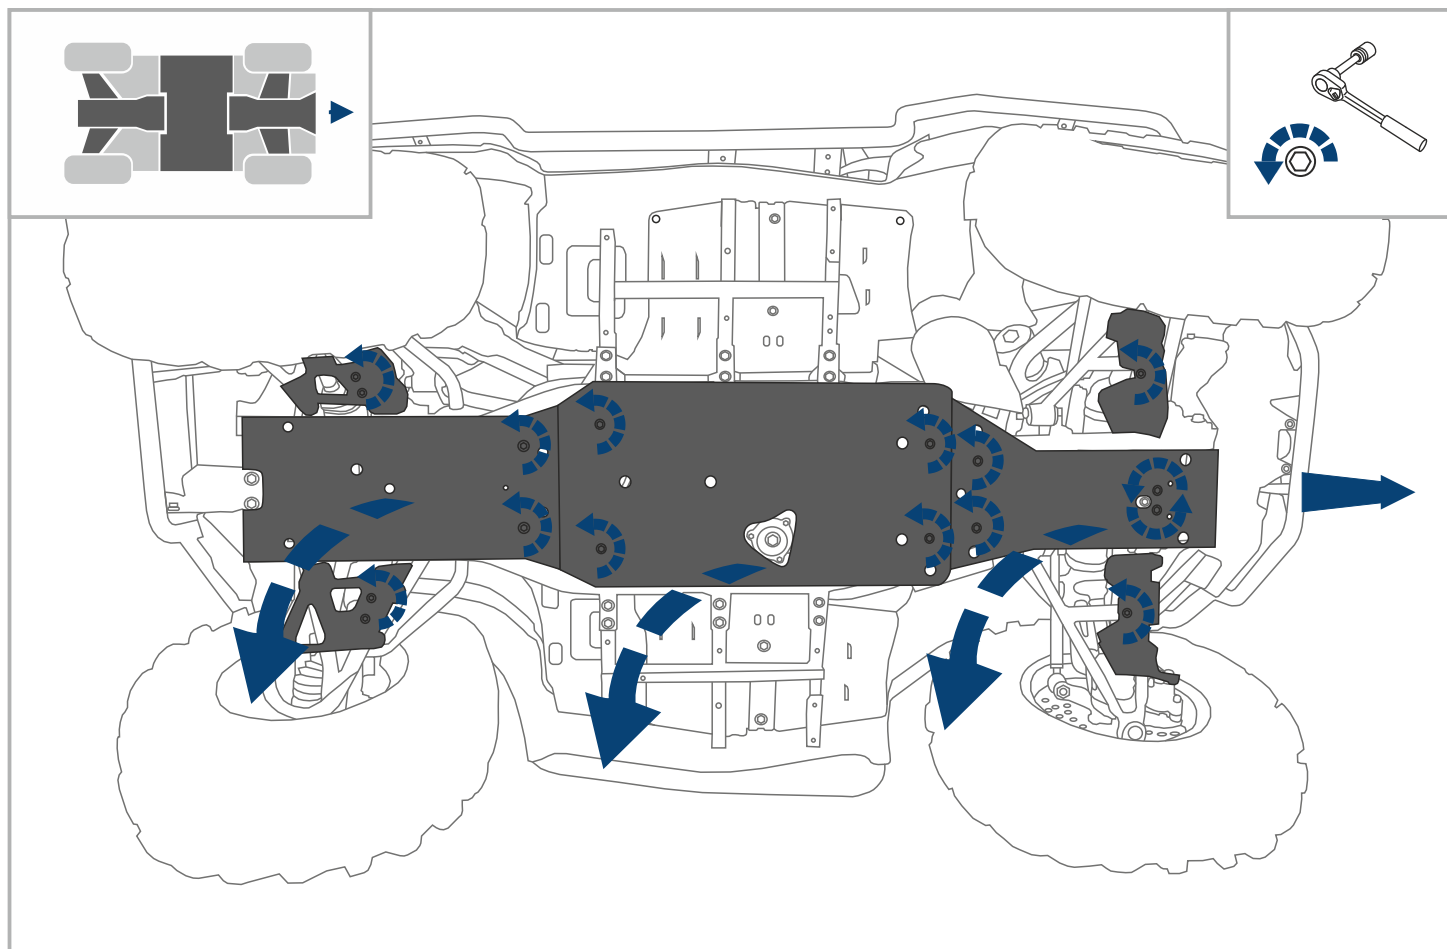


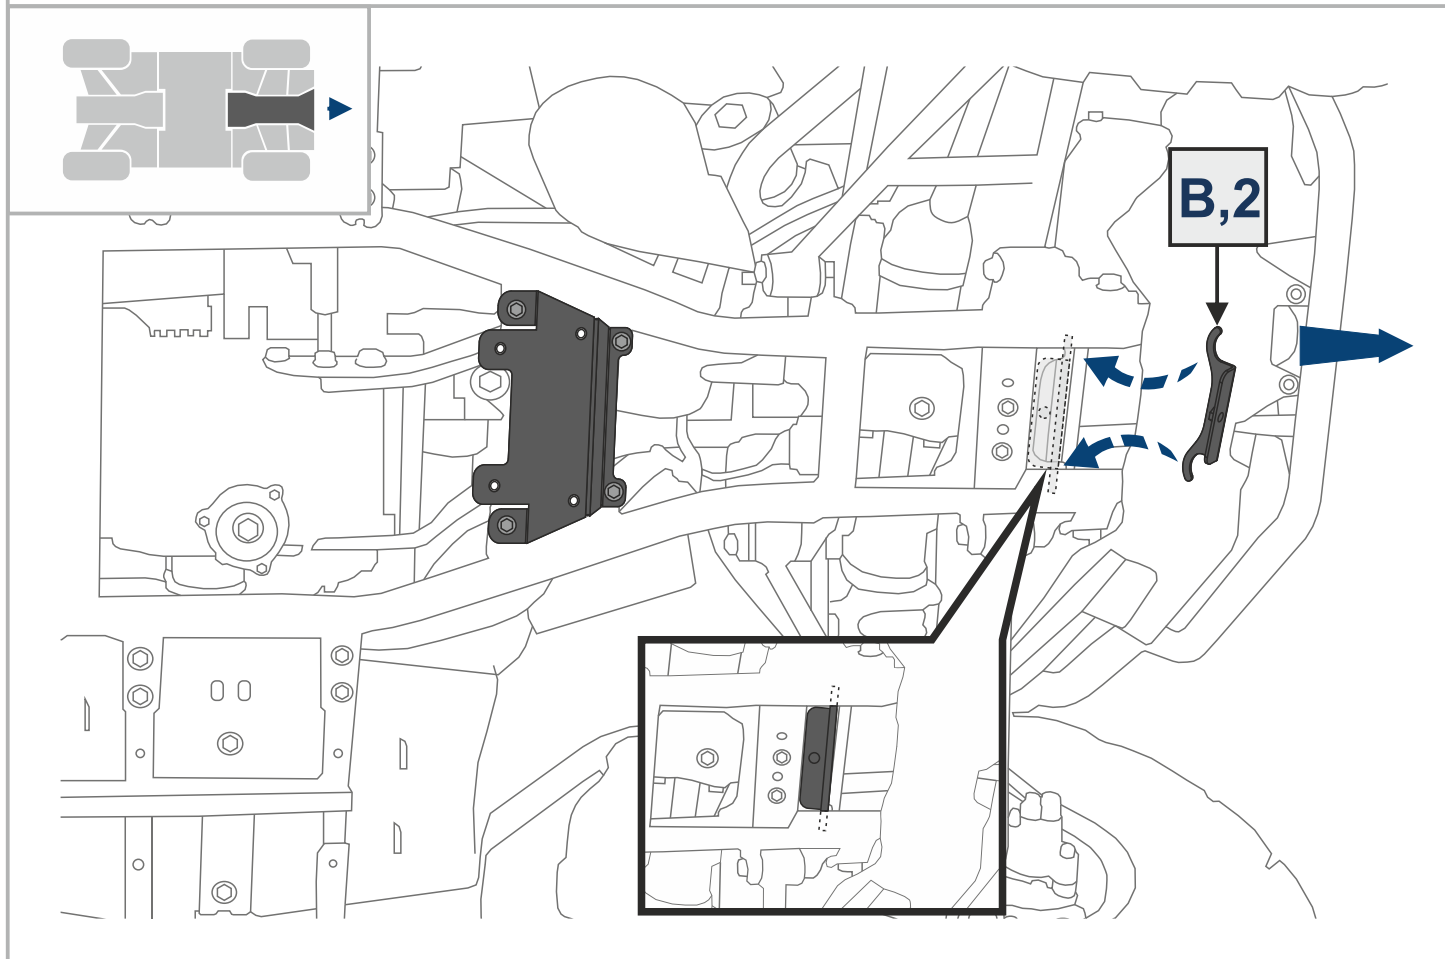
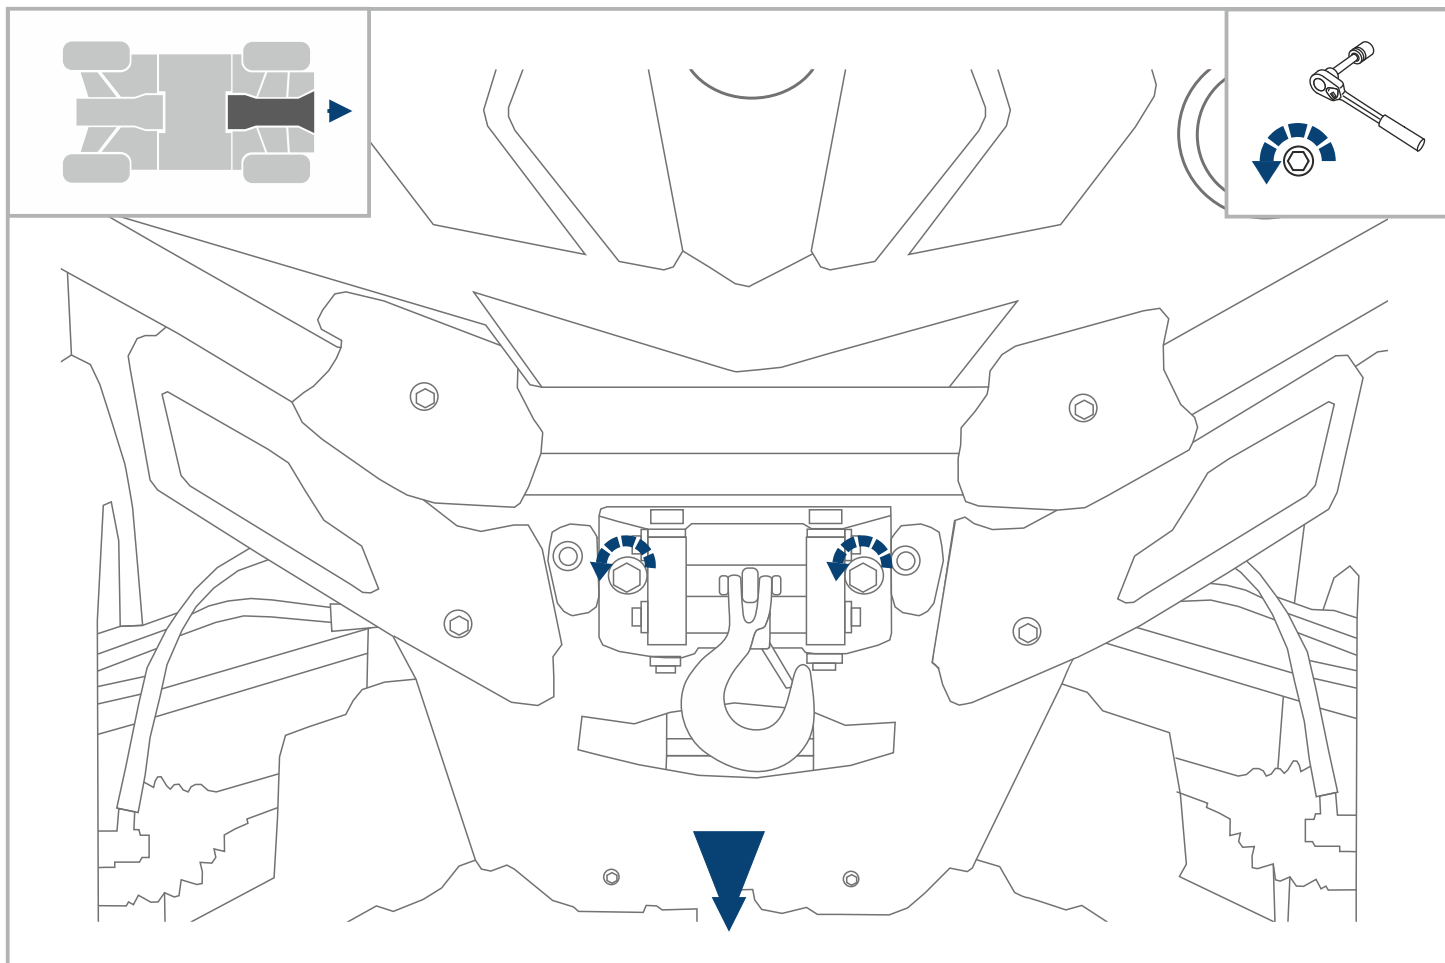


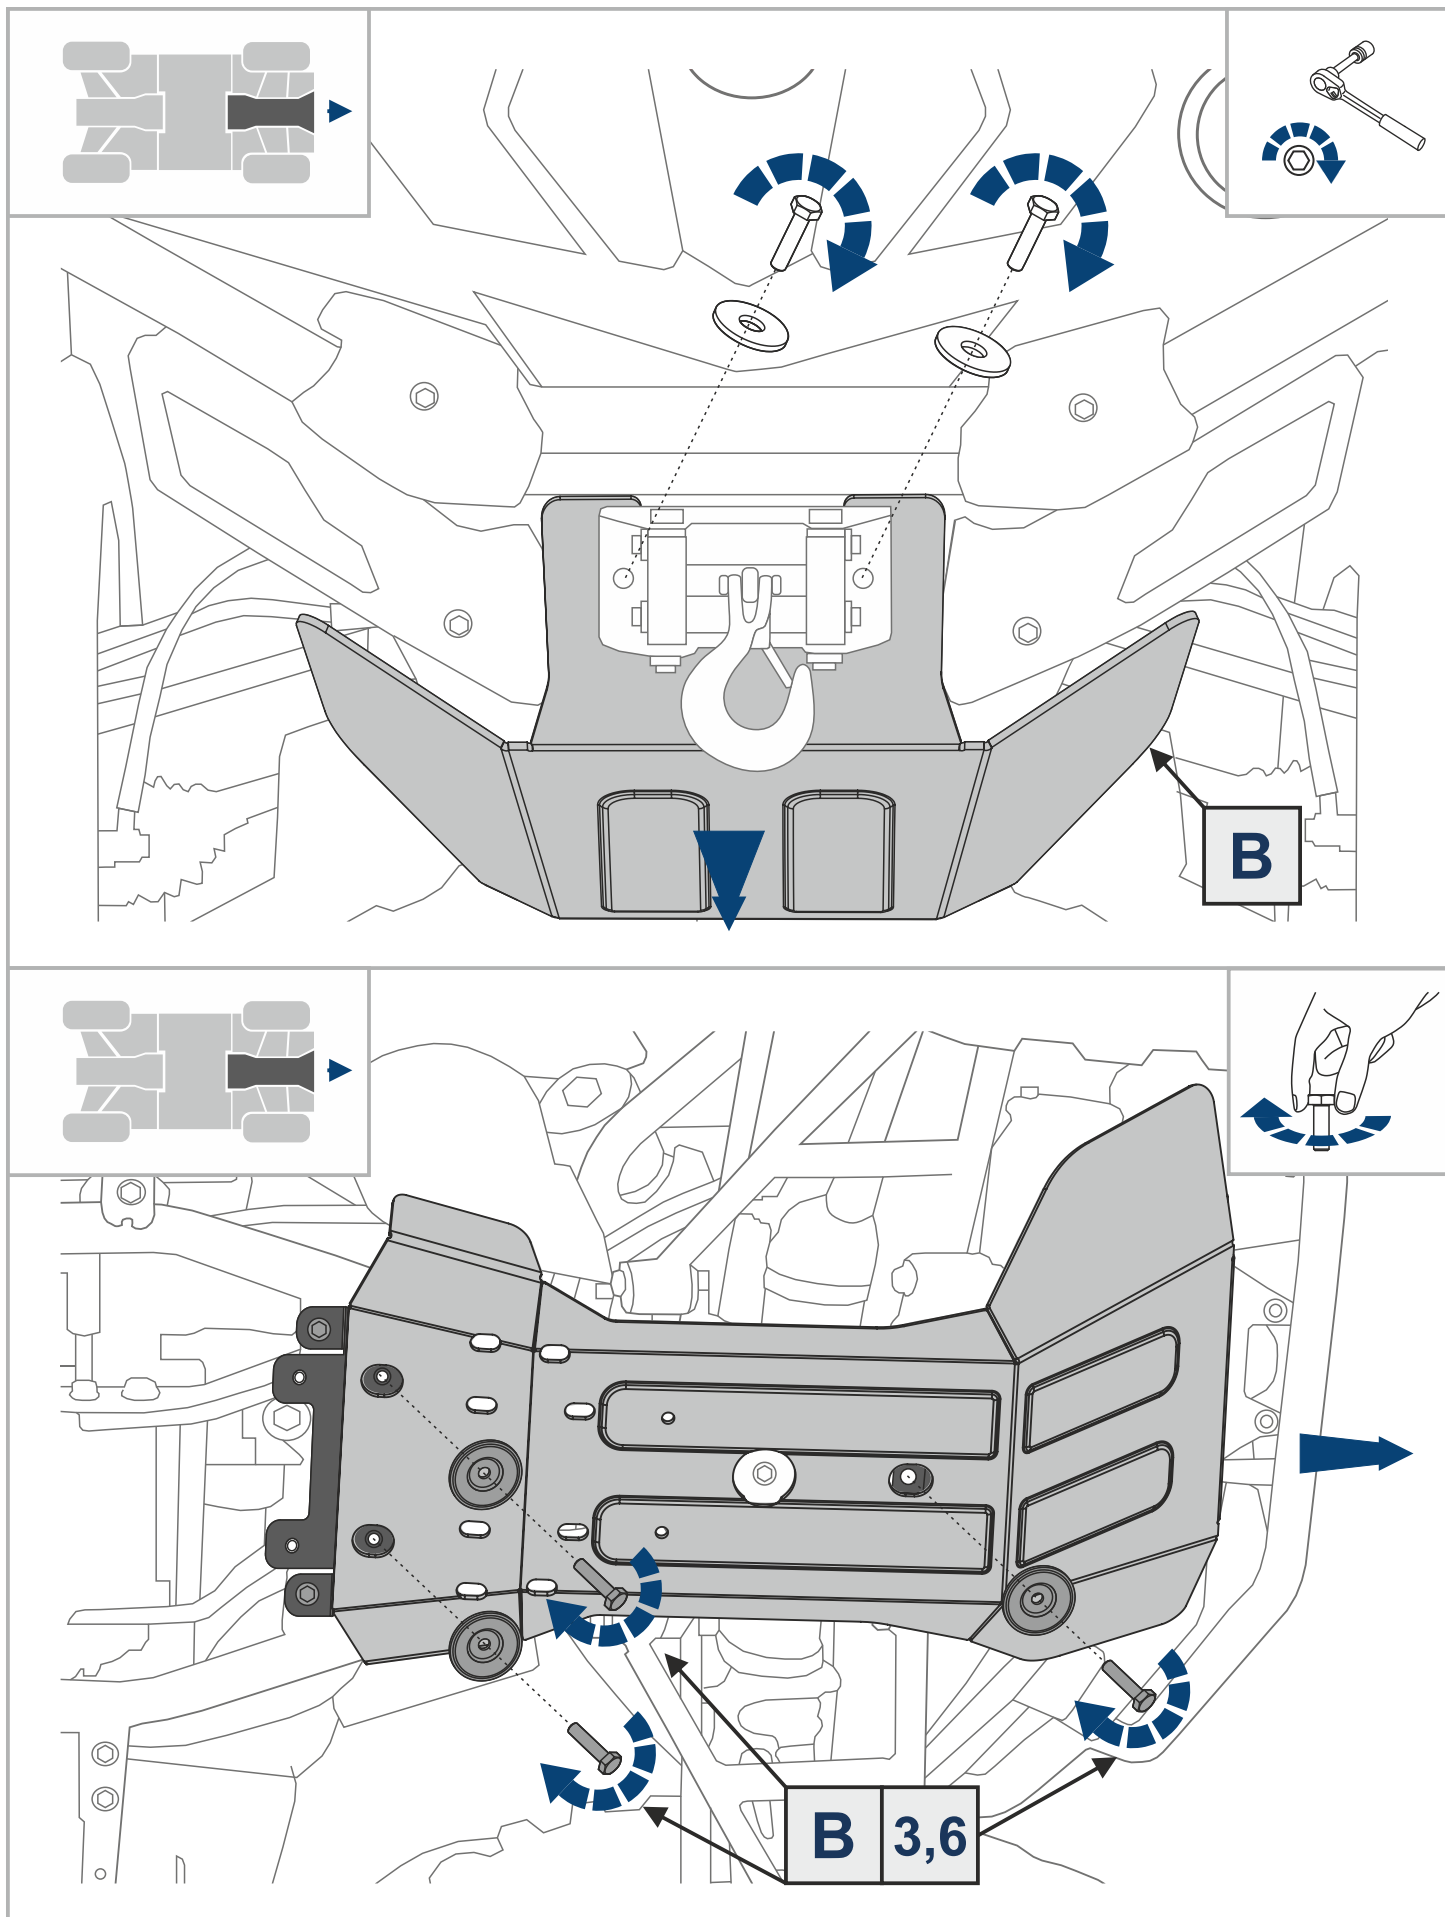


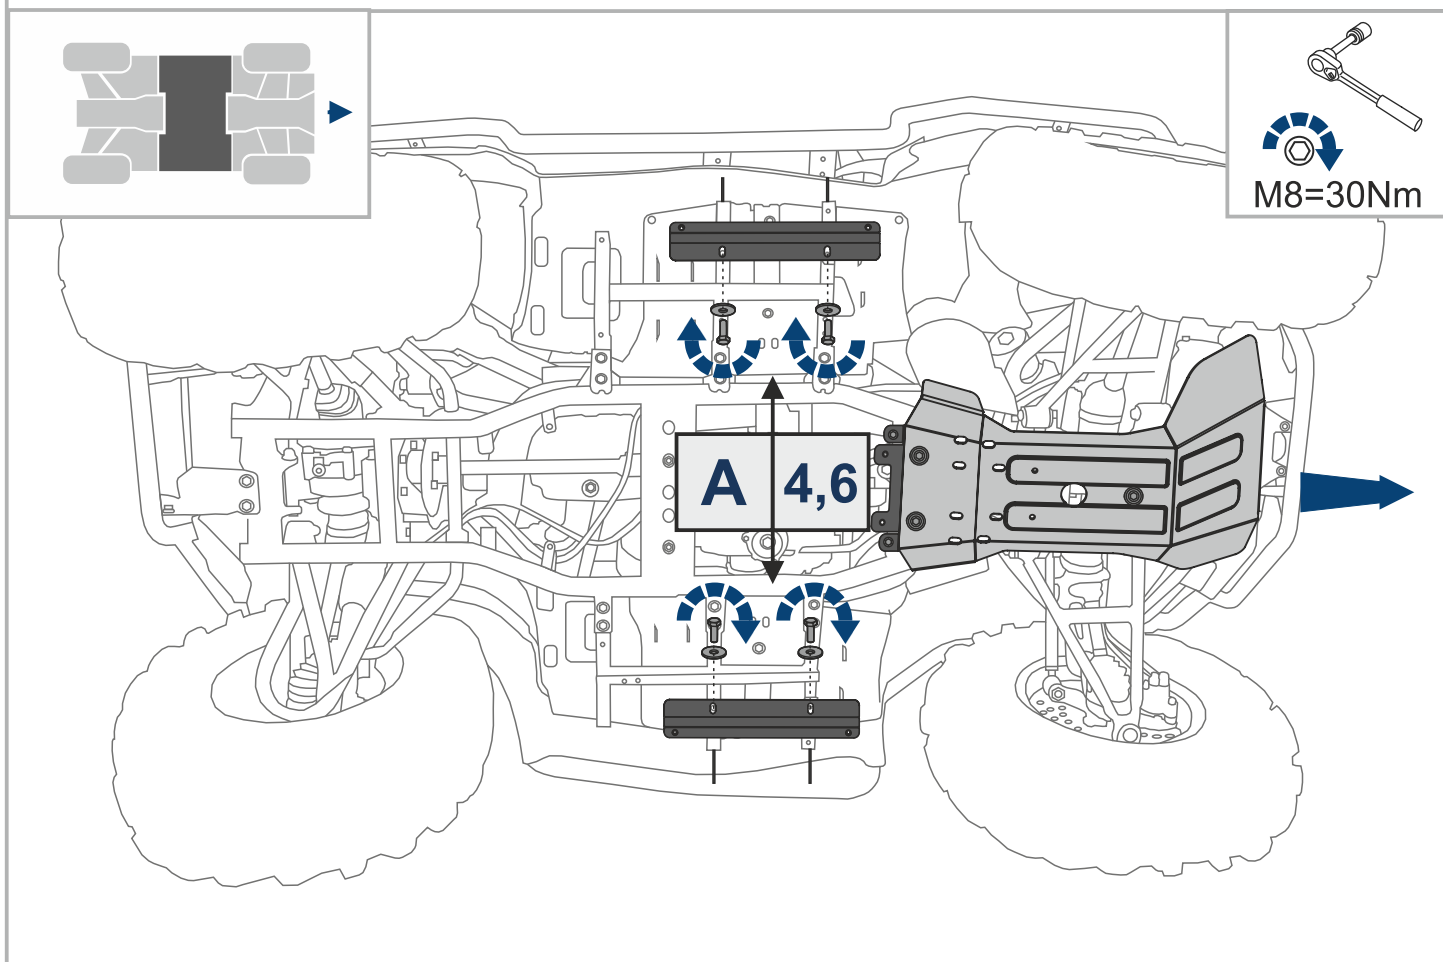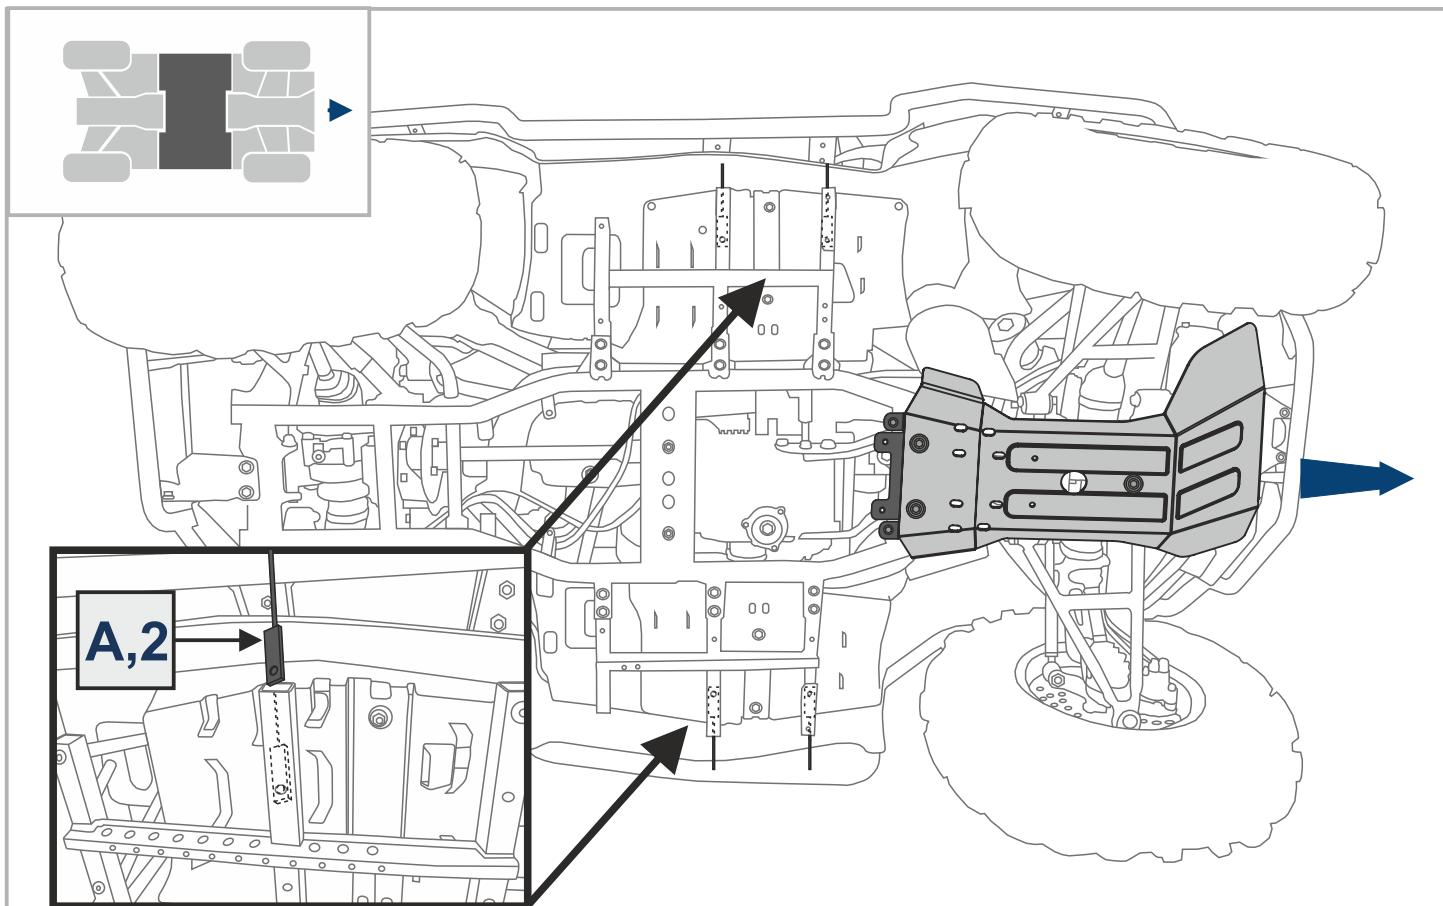

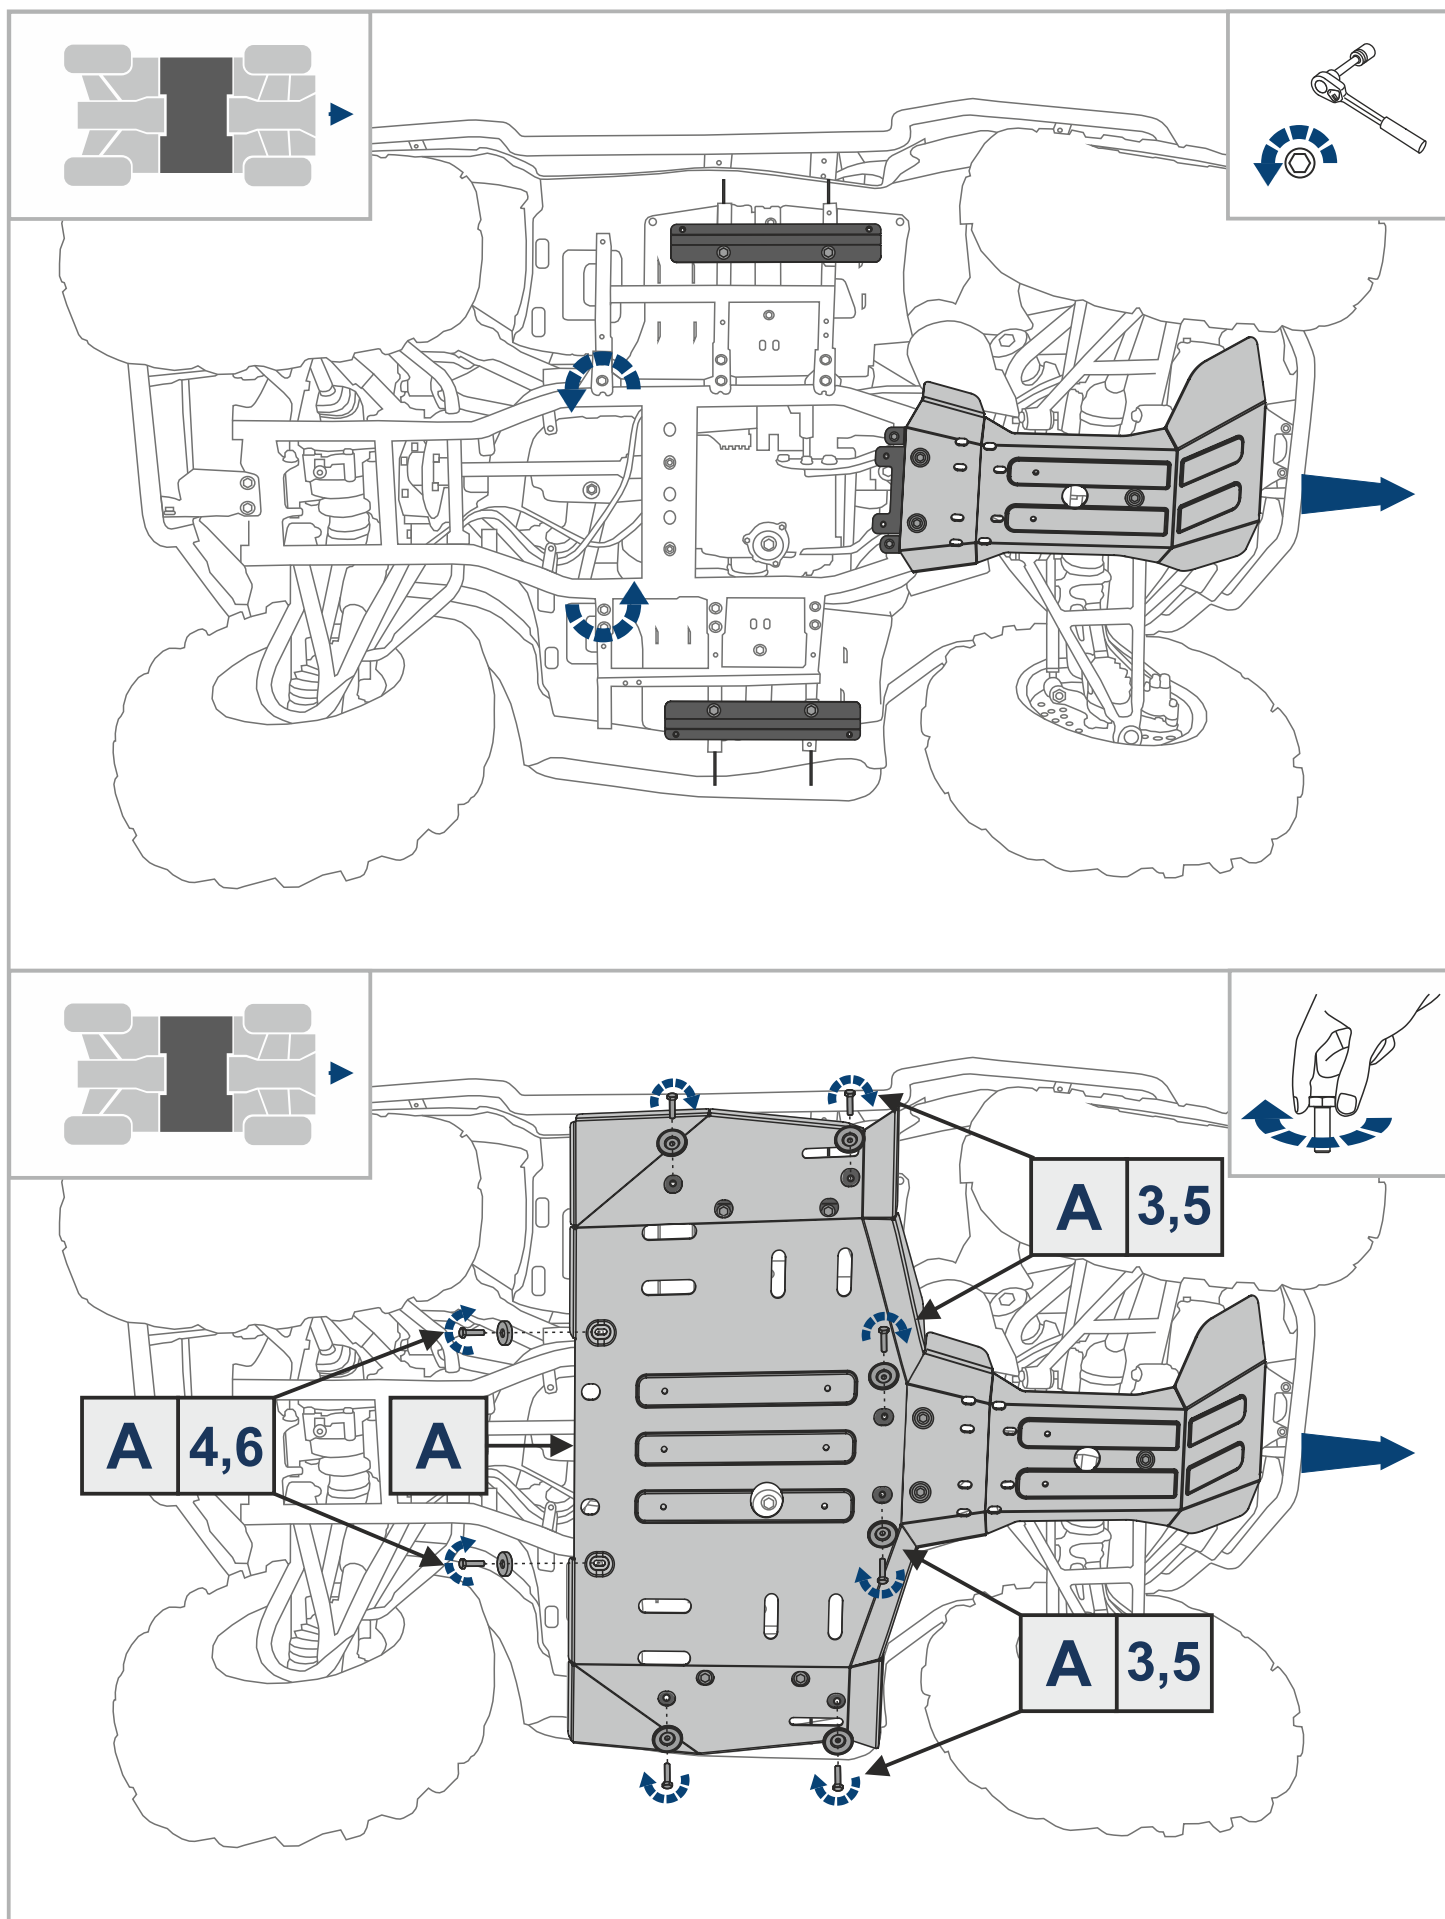

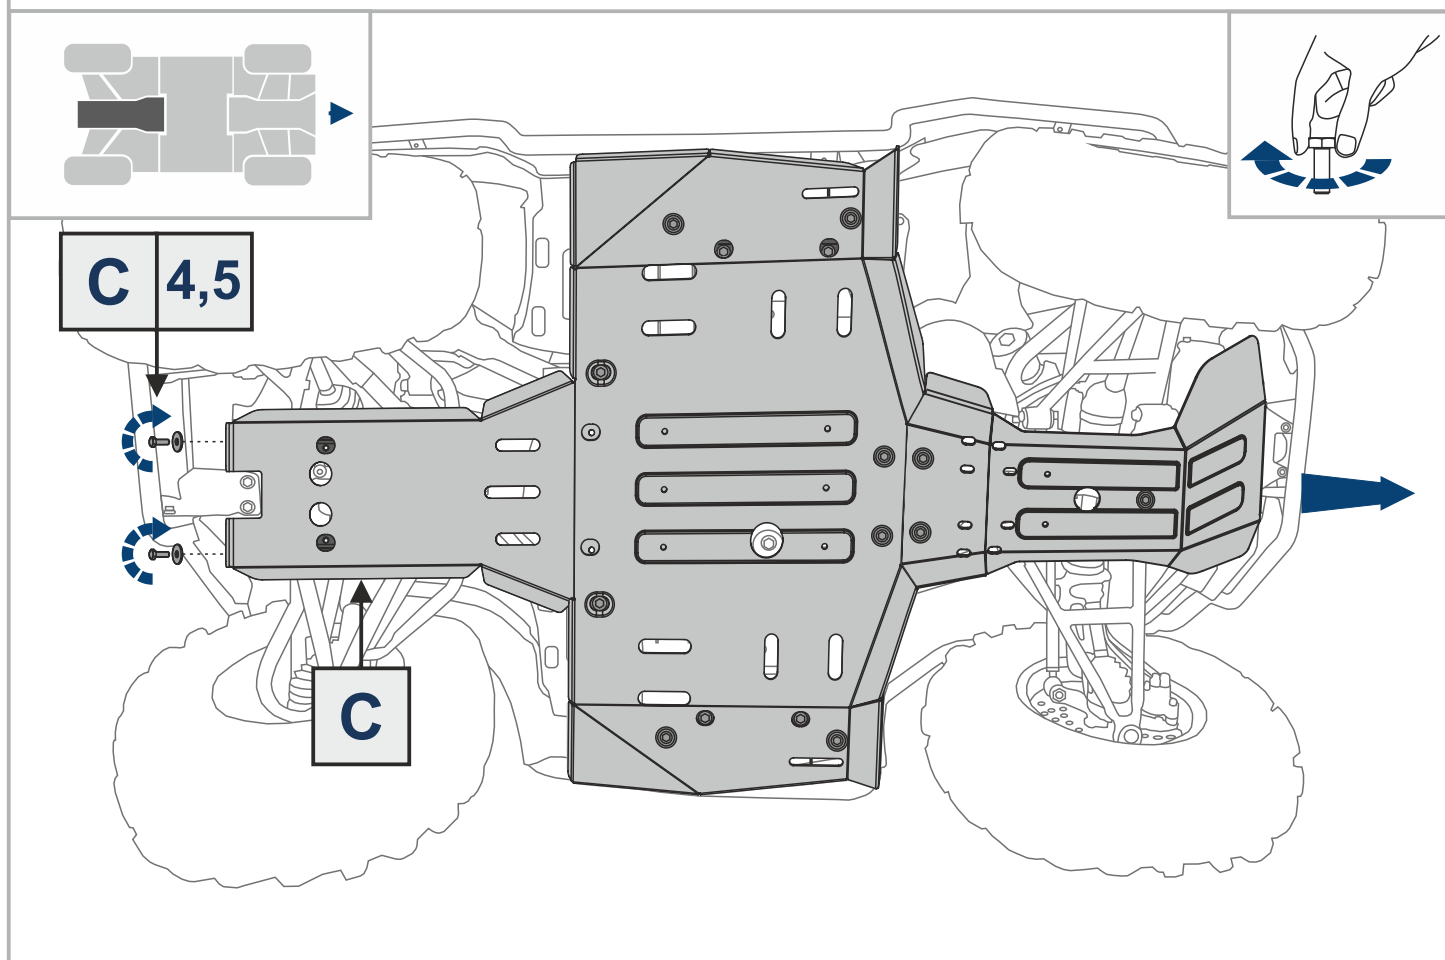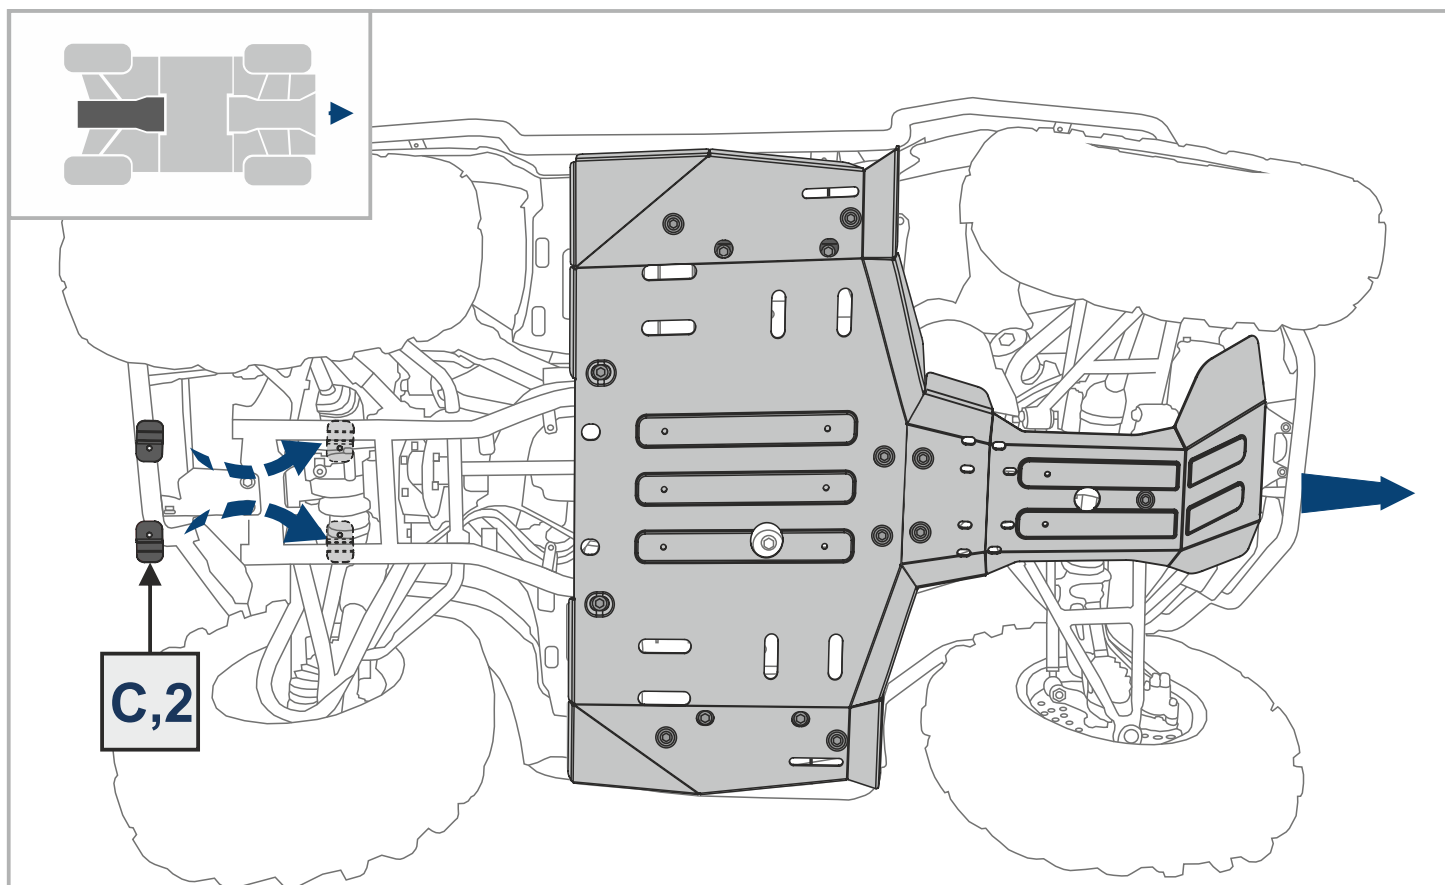

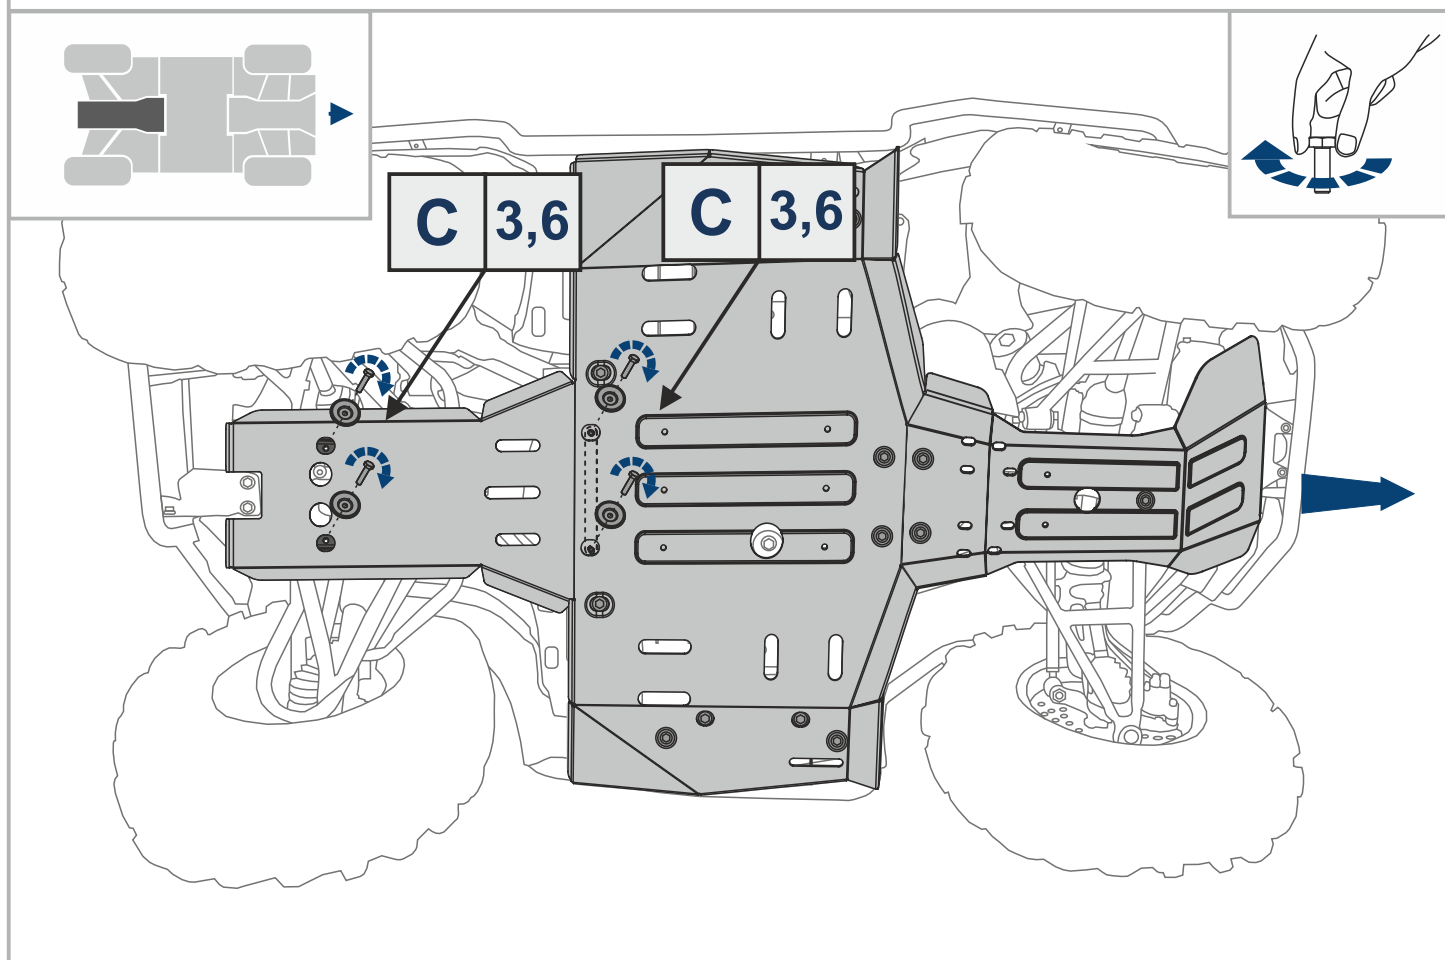
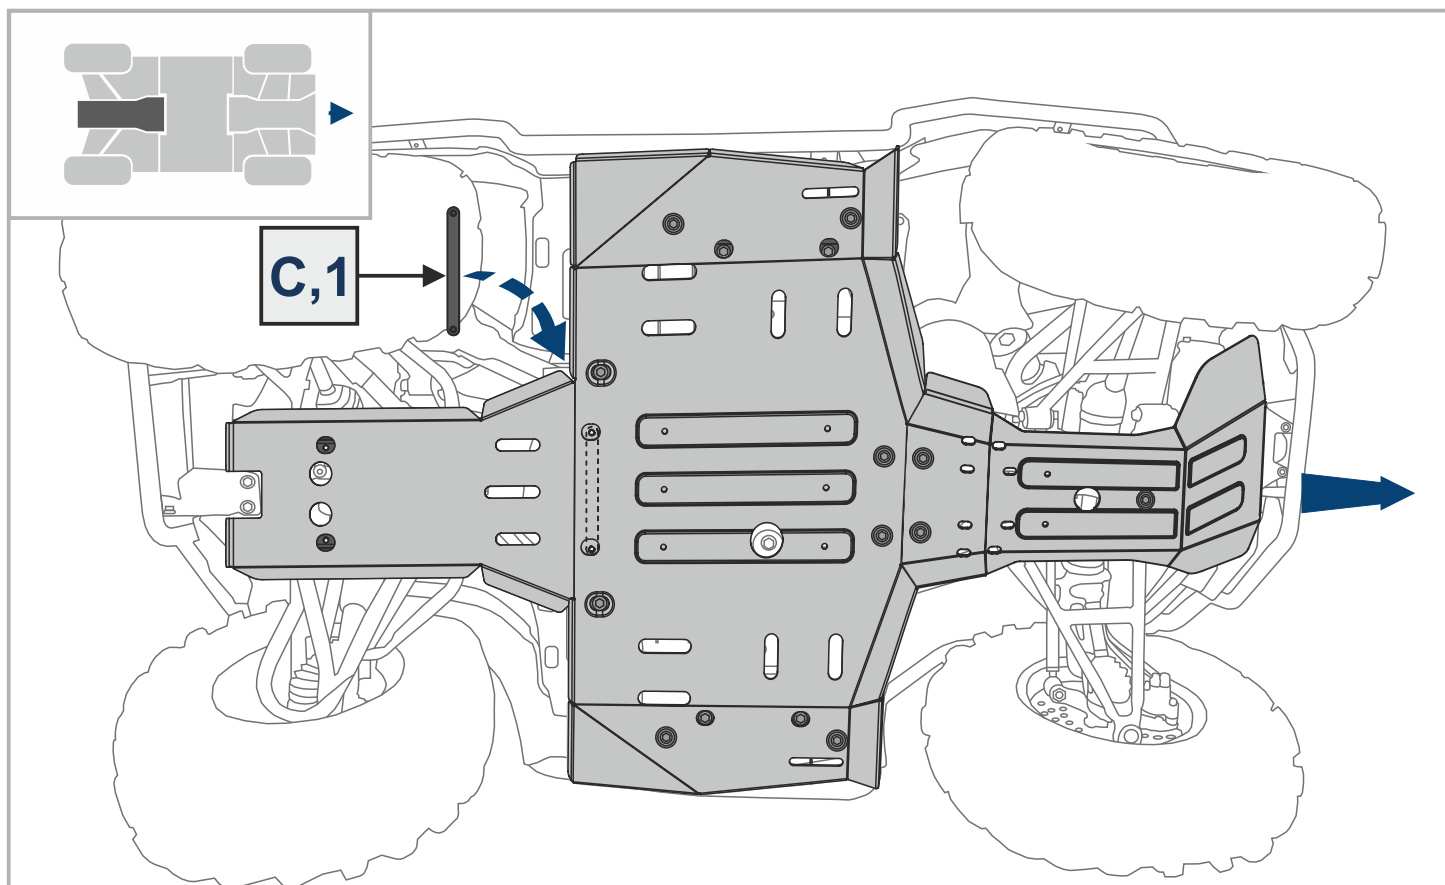


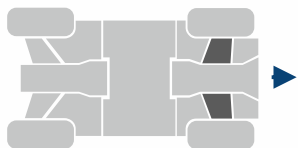


D=E






M6=10Nm

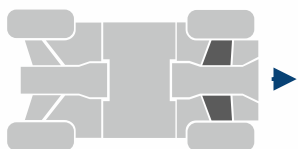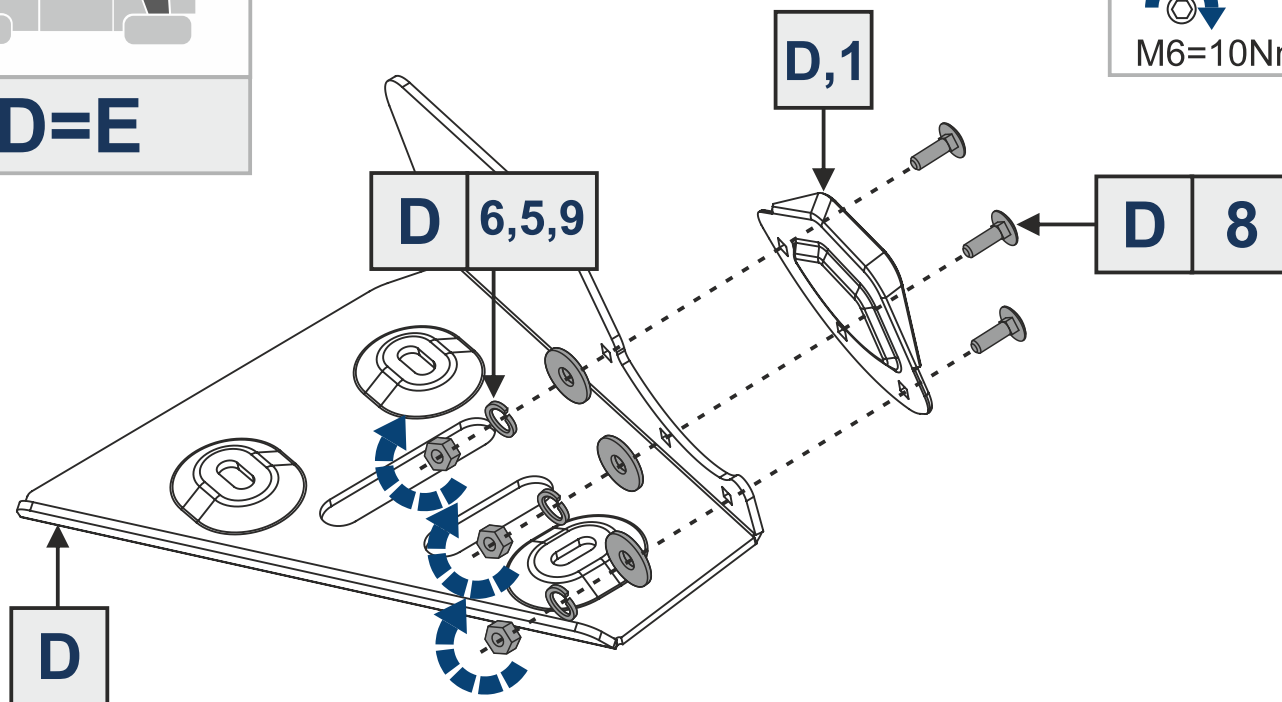



D=E

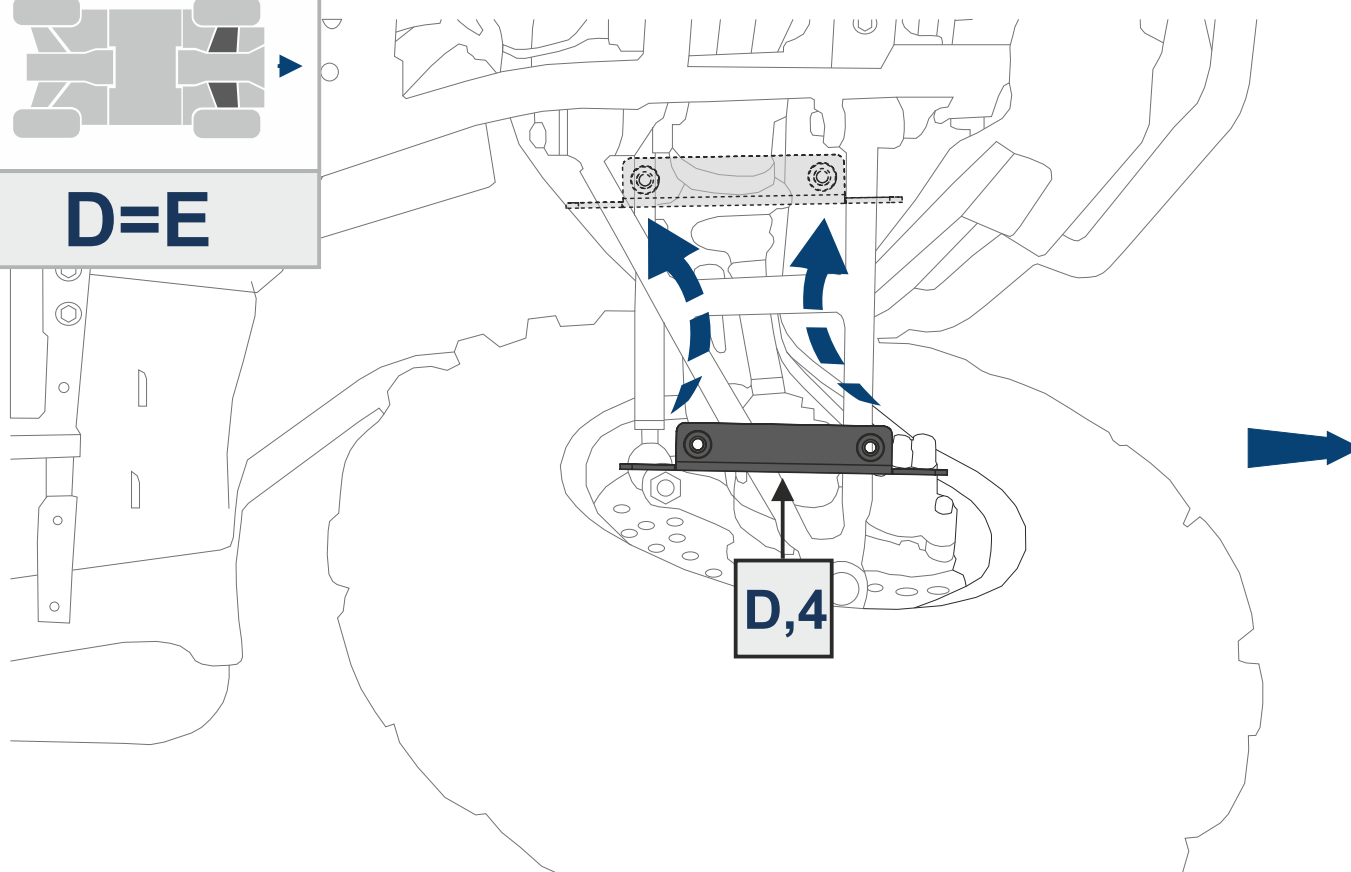

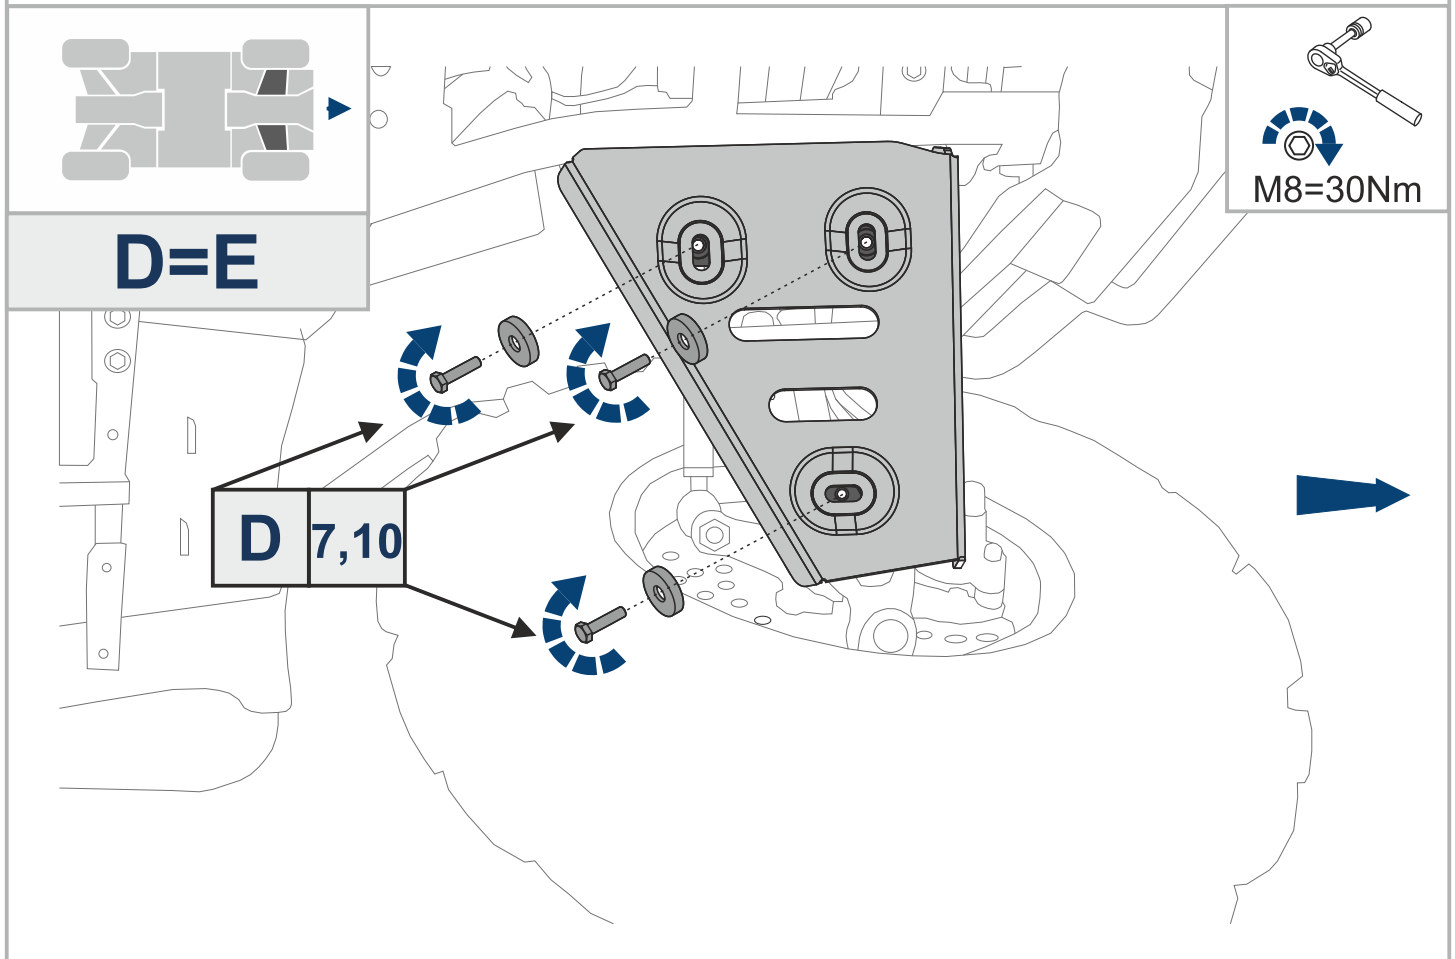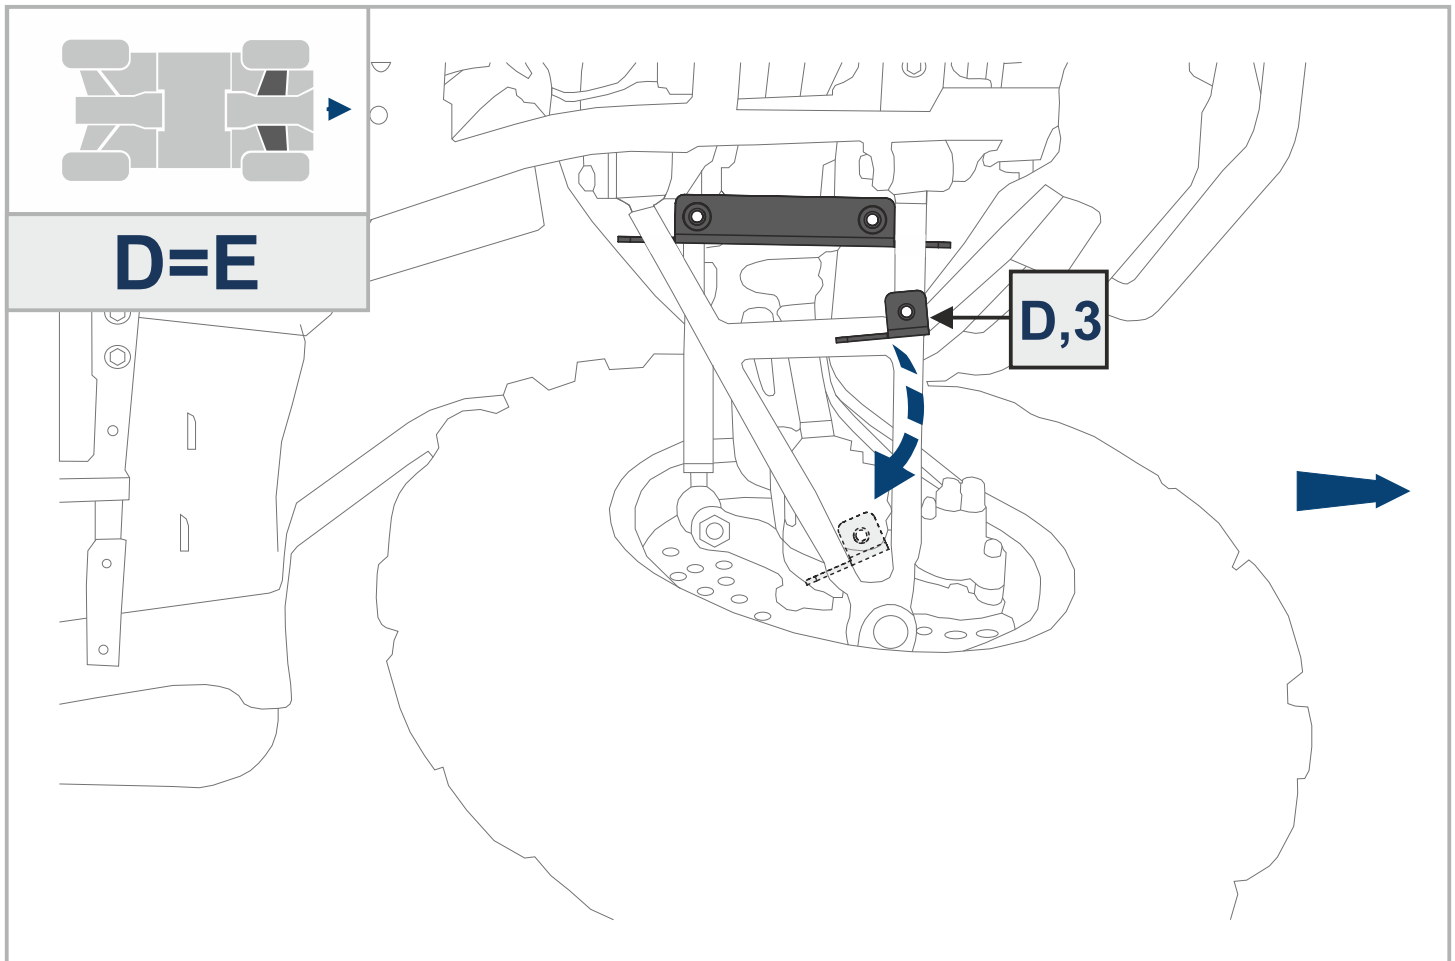

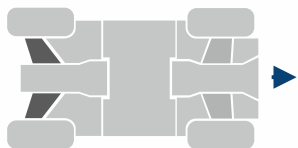

F=G

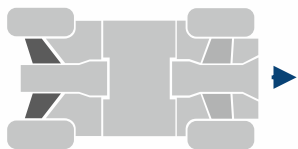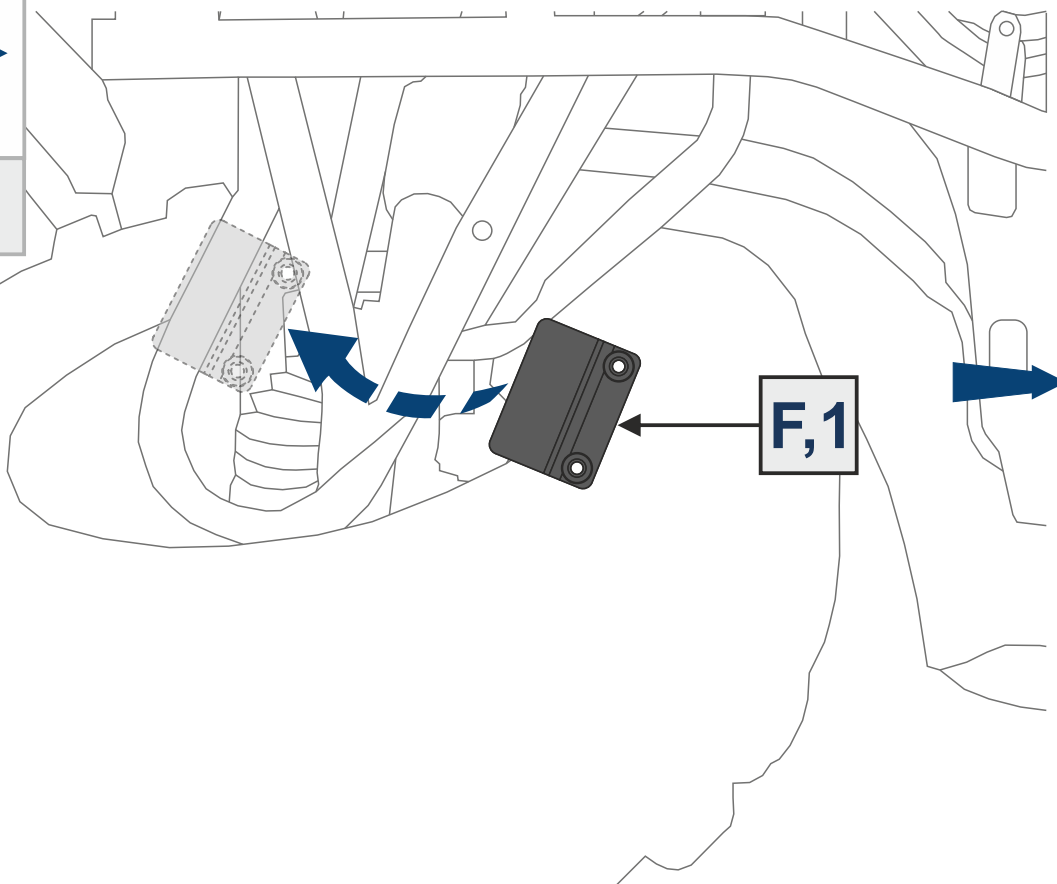

F=G

